
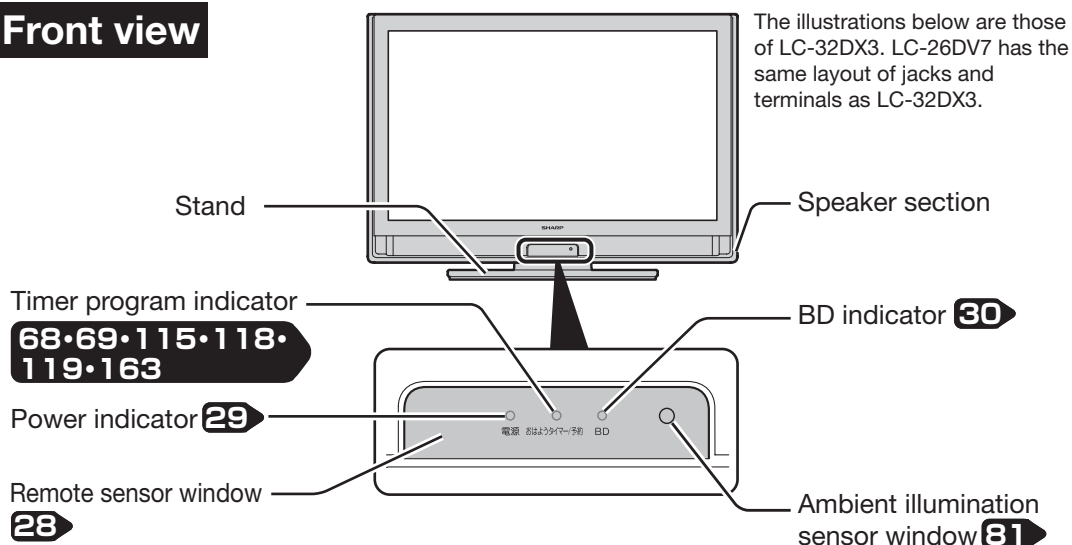


# English Guide

## Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.



### Front view



### Adjusting the LCD panel angle


- The LCD panel can be rotated horizontally up to 15° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

### Control panel

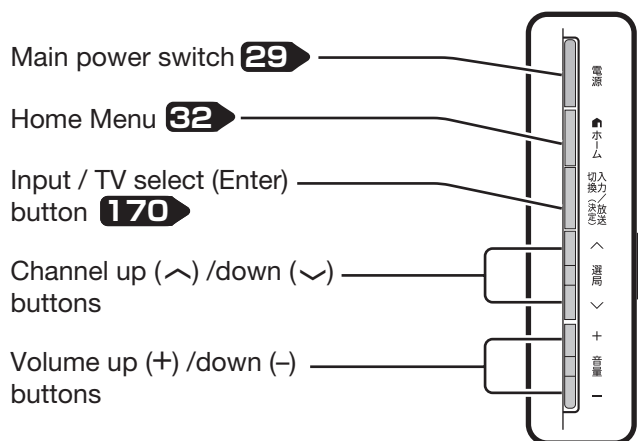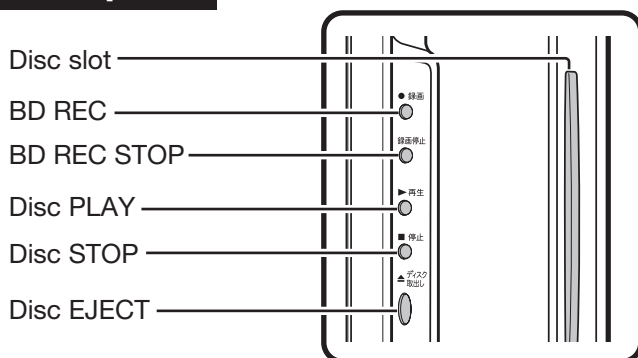

### Right side view

#### Right side view

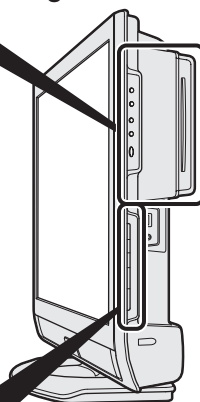

## Back view

Connect a Blu-ray Disc  
player, AV amplifier, etc.

AV in 1 and 2 (HDMI)  
**251・252・254・  
255・256・258**

LAN jack  
(10BASE-T/100BASE-TX)  
**185・203**

Digital audio output jack  
(optical)**255・257**

RS-232C  
**259**

AV in 3  
**251・253・256・260**

AV in 4/Audio out  
**251・253・256・257**

BS-CS 110 antenna input  
terminal **246~249**

PC input (audio)  
**258・259**

AV in 5 (PC)  
**259**


VHF-UHF antenna input  
terminal **246~249**

Connect the AC cord

AC cord connector  
(AC 100V) **261**

Headphones jack

The provided power connector  
may have different shape from  
that shown in the drawing.

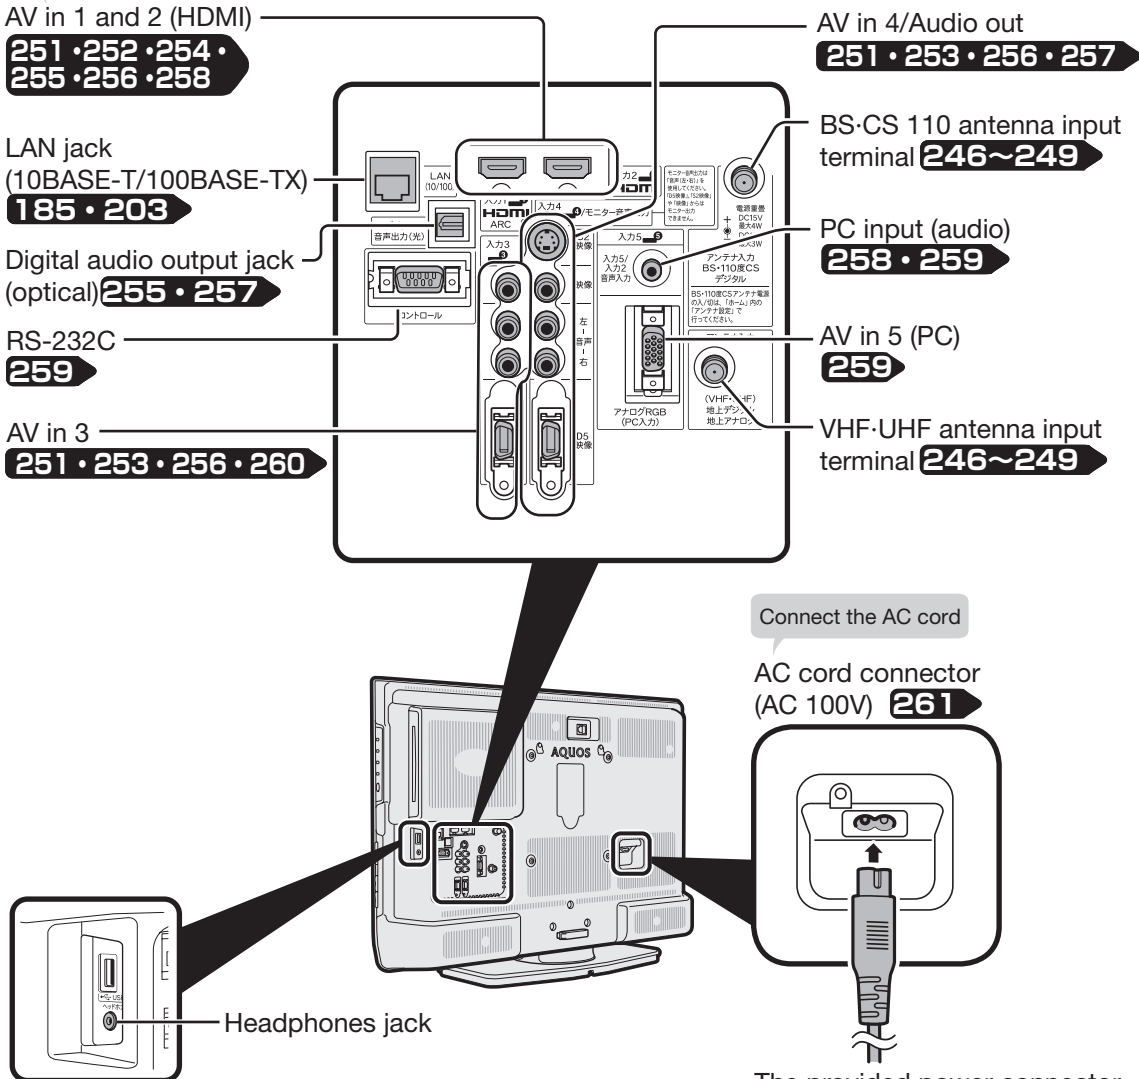

# Remote Control Unit

## Active/Standby 29

Press to engage the TV set in the active or standby mode.

## Channel select 38

- Press to select a channel.
- Use to input a number for various settings.

## Terrestrial analog/Terrestrial

## Digital/BS/CS 38

Select the CS digital channel for the first time. 268

## Linked data broadcast

## 41・142・209

## Mute 38

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Volume up (+)/down (-) 38

Press to adjust the volume.

## EPG 49・114・162

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

## Finish

Press to finish menu operation, etc.  
\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## List the programs recorded

## on a BD 128

## Display the Top Menu of

## the disc 131

## Display 42・43

Press to display or turn off the channel call, etc.



## Play back programs recorded on

## a disc 128

## Fast forward, rewind, etc. during

## playback 138~139

## 電源

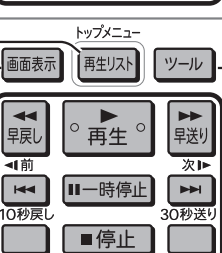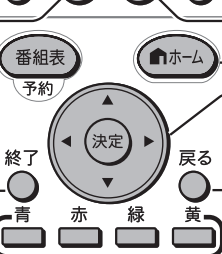

See Page 38 for how to select a program.

## View the Internet or IPTV

## 193・208

## Input select 170

## Channel up (^)/down (v) 38

Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

## Display the "Home" Menu

## 32・33

Press to start some useful operations of the TV.

## Cursor (up, down, left, right)

## 32・33

## Enter/Confirm

## 32・33

## Return 32

## Color 41・50・51

Use to operate EPGs and data program screens.

## Display the Tool Menu 36

## Buttons under the cover

Hold the cover by the projections ( ) and lift.

## AV mode select 75

## Audio select 59・60・142

## Picture select 60・143

## Caption 60・143

## Sleep timer 89


## Freeze 44

## View status of the BD 105

## Display the Pop-up Menu (BD) or

## Disc Menu (DVD) 131

## Display the Playback Menu 144

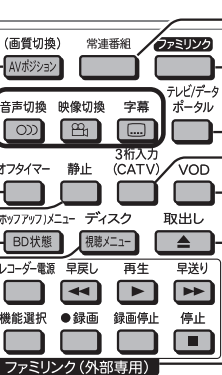

## Recommended

## programs select 56~58

Press to select a program which the TV set recommends.

## Media select 38・41

## CATV 40

## Digital channel number input 40

## Display the operation panel

## of VOD 213・217・229

## Eject the disc 31

## Familink


## 158~169

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

# Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

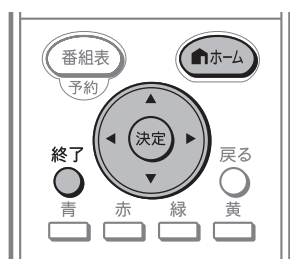

## ◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「 (View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

# 1

Press



and  
select  
with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



# 2

Select  
with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



# 3


select  
with



Press



Select “Language (言語)”.  
「Language (言語)」を選ぶ

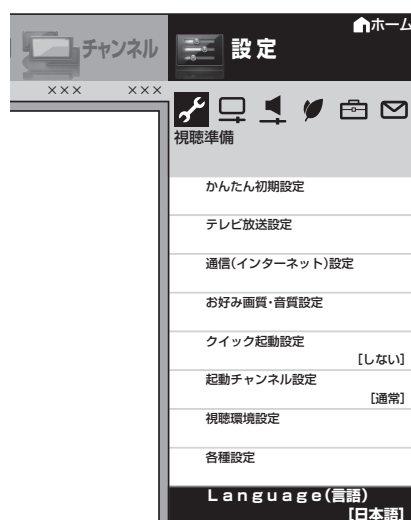

# 4

select  
with



Press



Select “English”.  
「English」を選ぶ

Enter.  
決定する



# 5

Press



Finish this operation.  
終了する

- The menu screen is now displayed in English.
- 画面表示が英語になります

はじめに  
お読みください

テレビを見る／  
便利な使いかた

ブルーレイディスク  
で録る・見る

ファミリンク

ビデオ・オーディオ・  
パソコンをつなぐ

インターネット／  
ホームネットワーク

設置・接続・  
受信設定

故障かな？／  
エラーメッセージ

お役立ち情報  
(仕様や索引)

English  
Guide